


Fixing bracket

SS174 50

Size	
SS172	Size 2
SS173	Size 3
SS174	Size 4

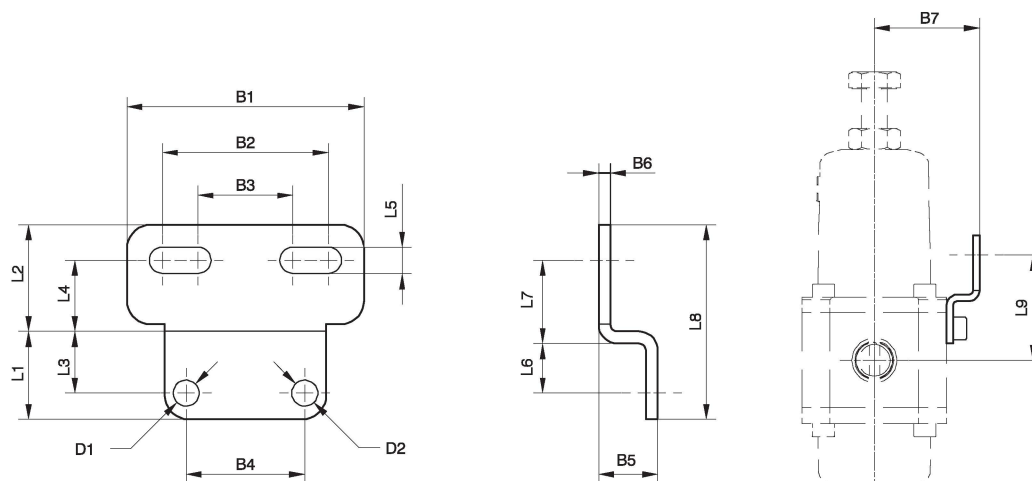


Model	B1	B2	B3	B4	B5	B6	B7	D1	D2	L1	L2	L3	L4	L5	L6	L7	L8	L9
SS17250	50	35	20	25	12,5	2,5	40	Ø5,5	Ø5,5	18,5	22,5	13	15	5,5	10,5	17,5	41	40
SS17350	60	45	20	22	14,5	3	50	Ø6,5	Ø6,5	14	24,5	/	16,5	6,5	11	19,5	44,5	45
SS17450	80	60	40	36	16	4	62	Ø8,5	Ø8,5	24	31	/	/	8,5	11	25	55	58,5

Pressure gauge

SS17070A **A**

Scale	
A	0 - 4 bar
B	0 - 12 bar

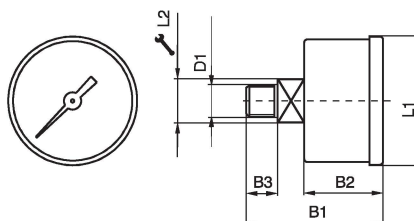


Model	B1	B2	B3	D1	L1	L2
SS17070AA SS17070AB	40	25	10	1/8" NPT	42,5	11

Tamper-proof kit


Size	
SS172	Size 2 - Size 3
SS174	Size 4

SS174 55

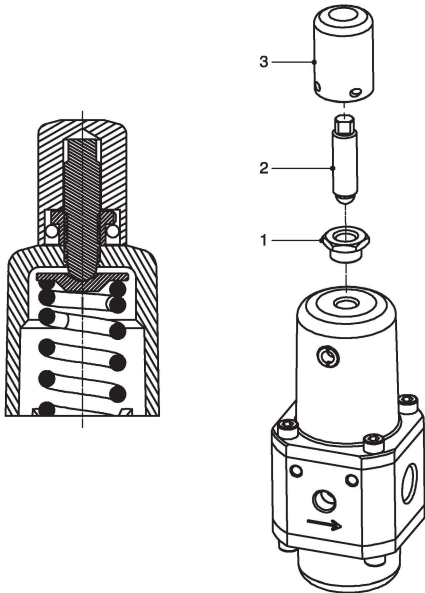

To use, replace the standard adjustment screw and nut with the screw and nut supplied in the kit. Assemble the screw and nut as shown (see adjacent drawing), adjust until the desired P_2 value is reached, lock the nut and insert the cap that can be locked with wire or padlock.

Tamper-proof kit	
1	Adjustment screw
2	Locking nut
3	Tamper-proof cap

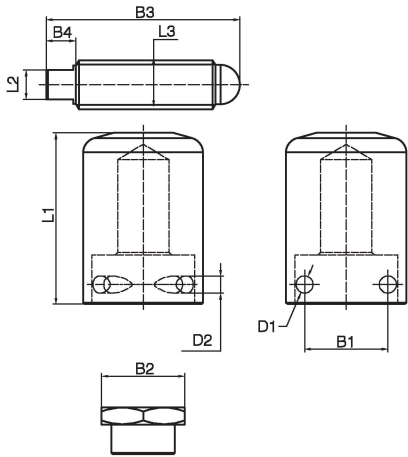

Model	B1	B2	B3	B4	D1	D2	L1	L2	L3
SS17250	17	Ch.17	39,5	6	Ø3,5	Ø3,5	35	Ch. 6	M10x1,5
SS17450	19	Ch. 20	56,5	6,5	Ø3,5	Ø3,5	45	Ch. 7	M12x1,75